


1 2 3 4

9. EXPLODED VIEWS AND PARTS LIST

- NOTES:
- Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
 - The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screws adjacent to ▼ mark or  (screw indication) mark on product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)


9.1 PACKING SECTION

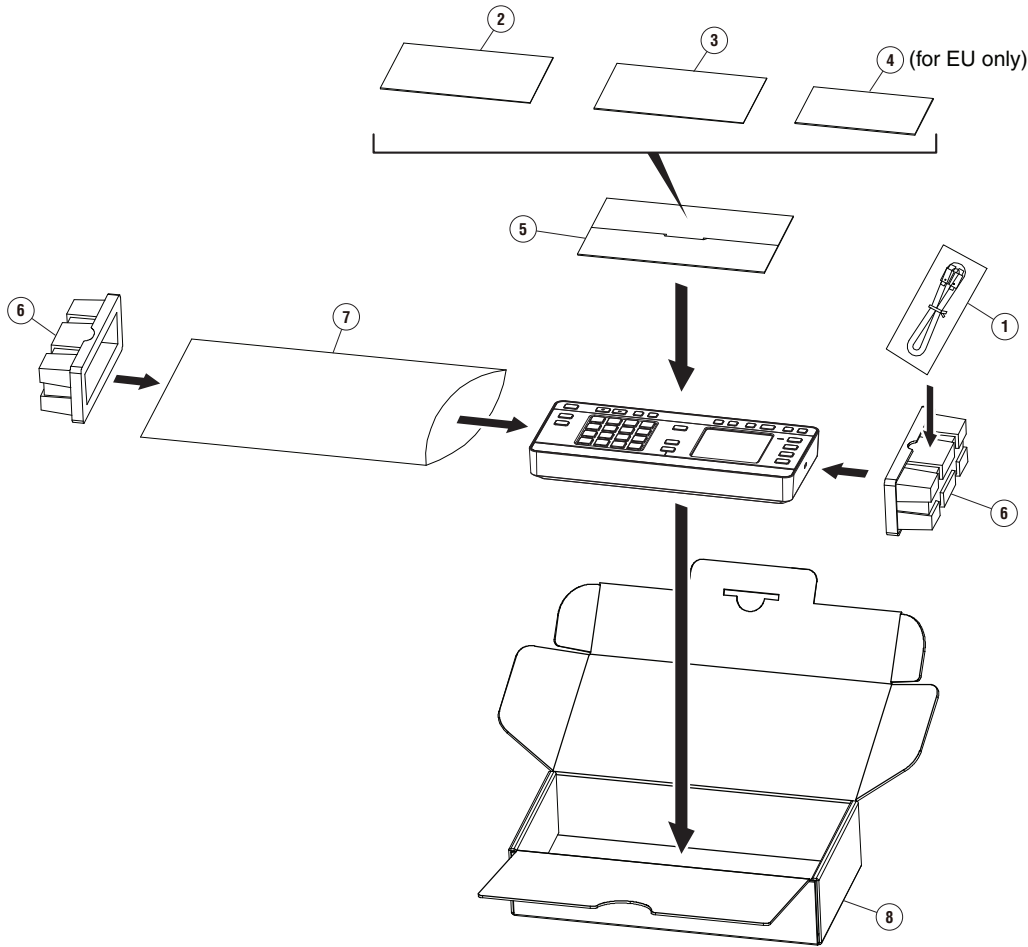

PACKING SECTION PARTS LIST

Mark No.	Description	Part No.
1	USB cable (USB 2.0 Type-C plug - USB Type-C plug)	628080099
2	Quick Start Guide	640000659
3	Precautions for Use	640000660
NSP 4	Warranty (for EU only)	•••••
5	Paper Board	649005225
6	Pulp End Piece	649005226
7	CPE Polybag	643010244
8	Carton	649005222

9.2 EXTERIOR SECTION

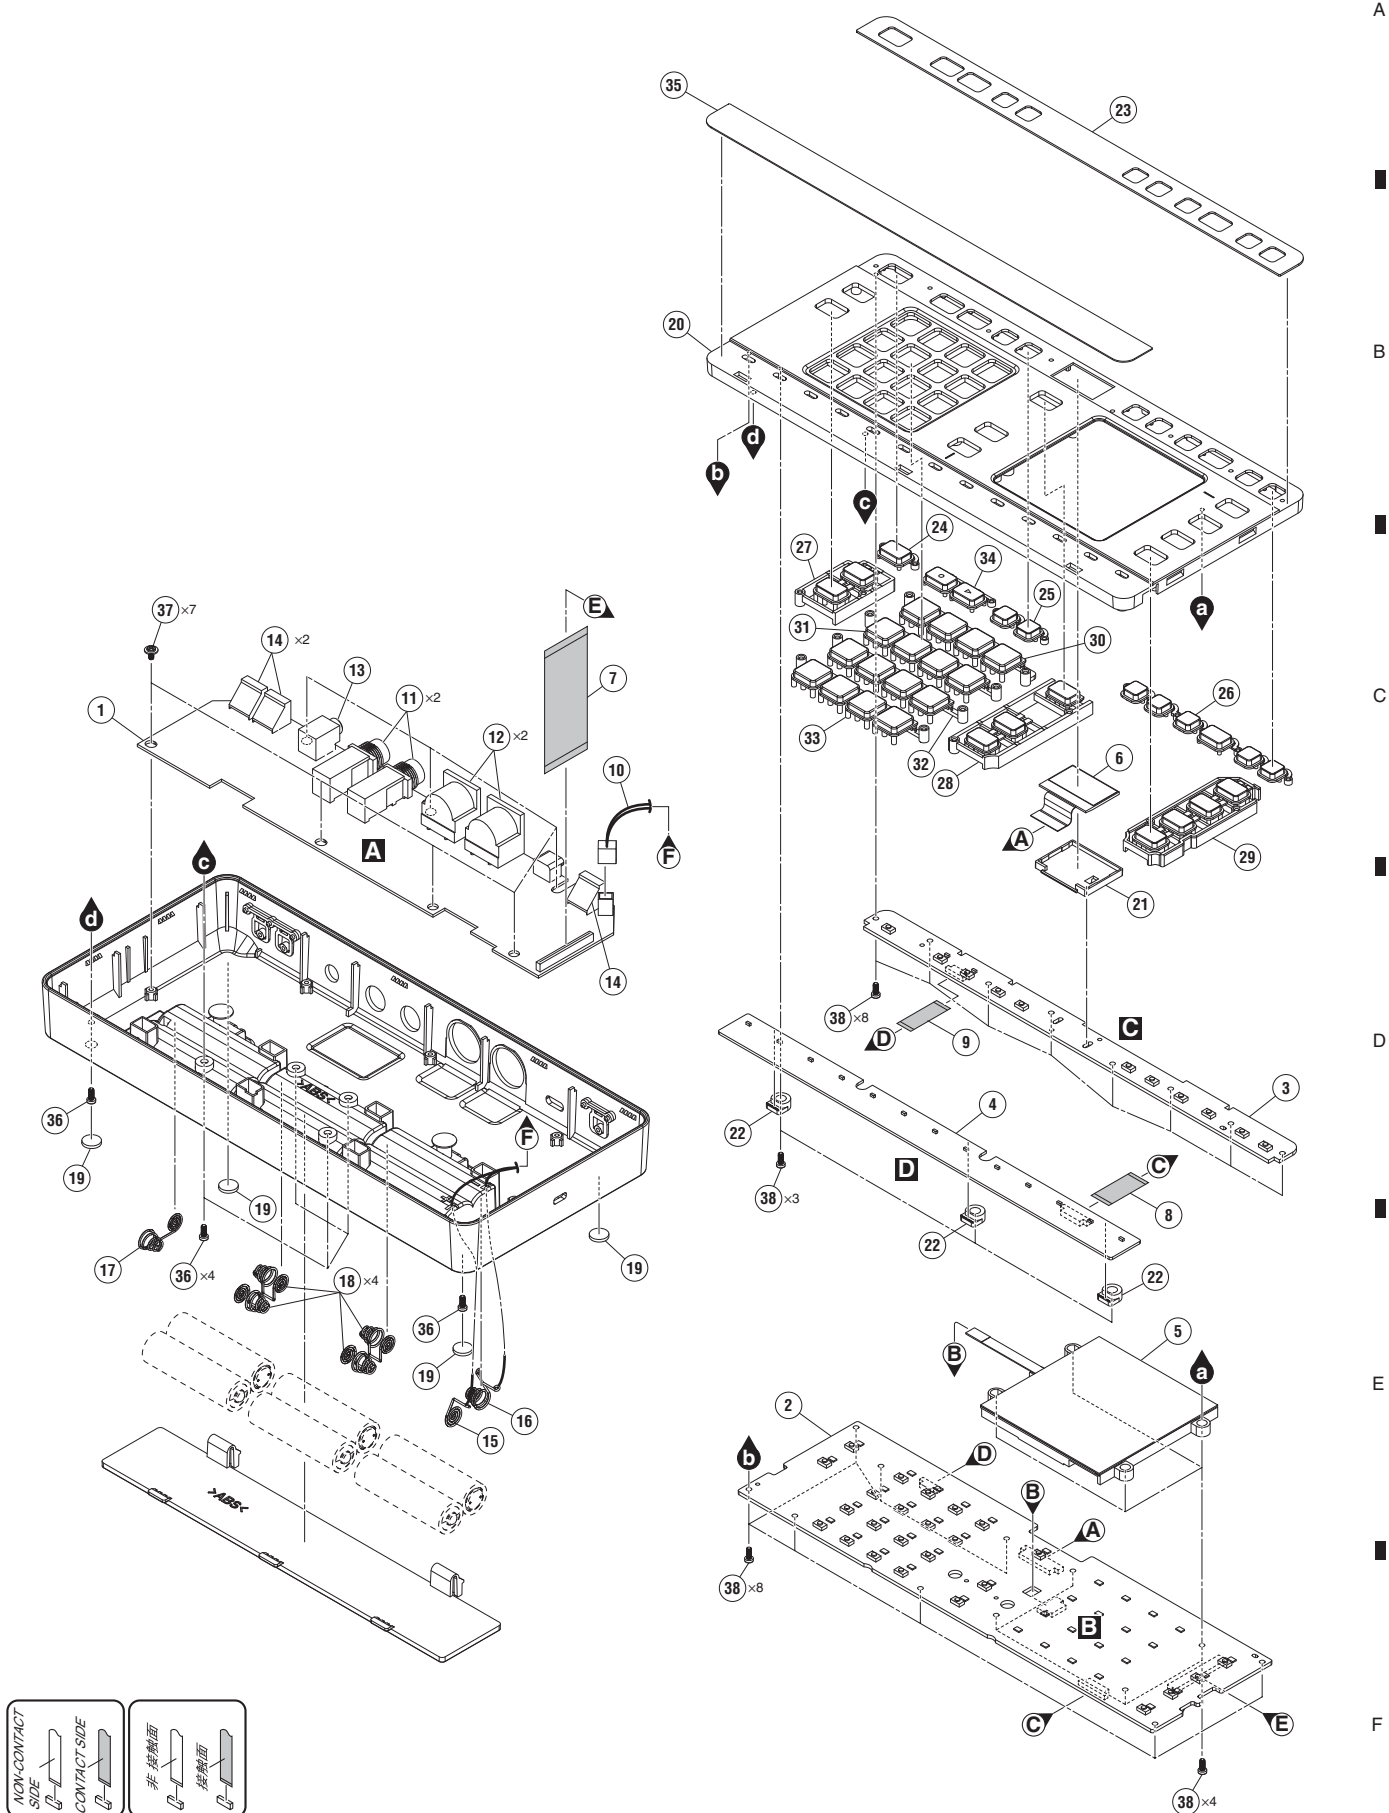

EXTERIOR SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1 MAIN BOARD Assy	1030004170
	2 FUNCTION BOARD Assy	1010307540
	3 TOP FUNCTION BOARD Assy	1010307530
	4 TOUCH BOARD Assy	1019905370
	5 Touch XY Pad Assy	103000429
	6 OLED Display	618000161
	7 FPC Soft Cable (50Pin)	628060391
	8 FPC Soft Cable (20Pin)	628060392
	9 FPC Soft Cable (16Pin)	628060393
	10 Colorized Flat Cable	628072544
B	11 STEREO Jack (JK1, JK2)	620020047
	12 MIDI Jack (JK7, JK11)	620030003
	13 STEREO Headphone Jack (JACK2)	620020068
	14 Tact Switch (SW2, KEY1, KEY2)	6210101040
	15 Battery Spring +	309070151
	16 Battery Spring -	309070150
	17 Battery Spring + -	309070149
	18 Battery Spring Bending + -	309070148
	19 Foot	629990590
	20 Top Cabinet	201031092
C	21 Bracket for OLED	215010212
	22 Round Press Block	299010230
	23 Lens (Global section panel)	642990322
	24 1x1 Button	206040207
	25 1x2 Button (BPM/MENU)	206040208
	26 1x6 Button	206040206
	27 2x1 Button	206990007
	28 3x1 Button	206990008
	29 4x1 Button	206990006
	30 16 Step Button 1-4	206990012
D	31 16 Step Button 5-8	206990011
	32 16 Step Button 9-12	206990010
	33 16 Step Button 13-16	206990009
	34 1x2 Button (REC/PLAY)	206010320
	35 Touch Keyboard 1-13	642990323
E	36 Flat Round Head Screw PB	301020007
	37 Screw PWB	301070064
	38 Screw PB	301020022