


9. EXPLODED VIEWS AND PARTS LIST

- NOTES:
- Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
 - The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screws adjacent to ∇ mark on product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

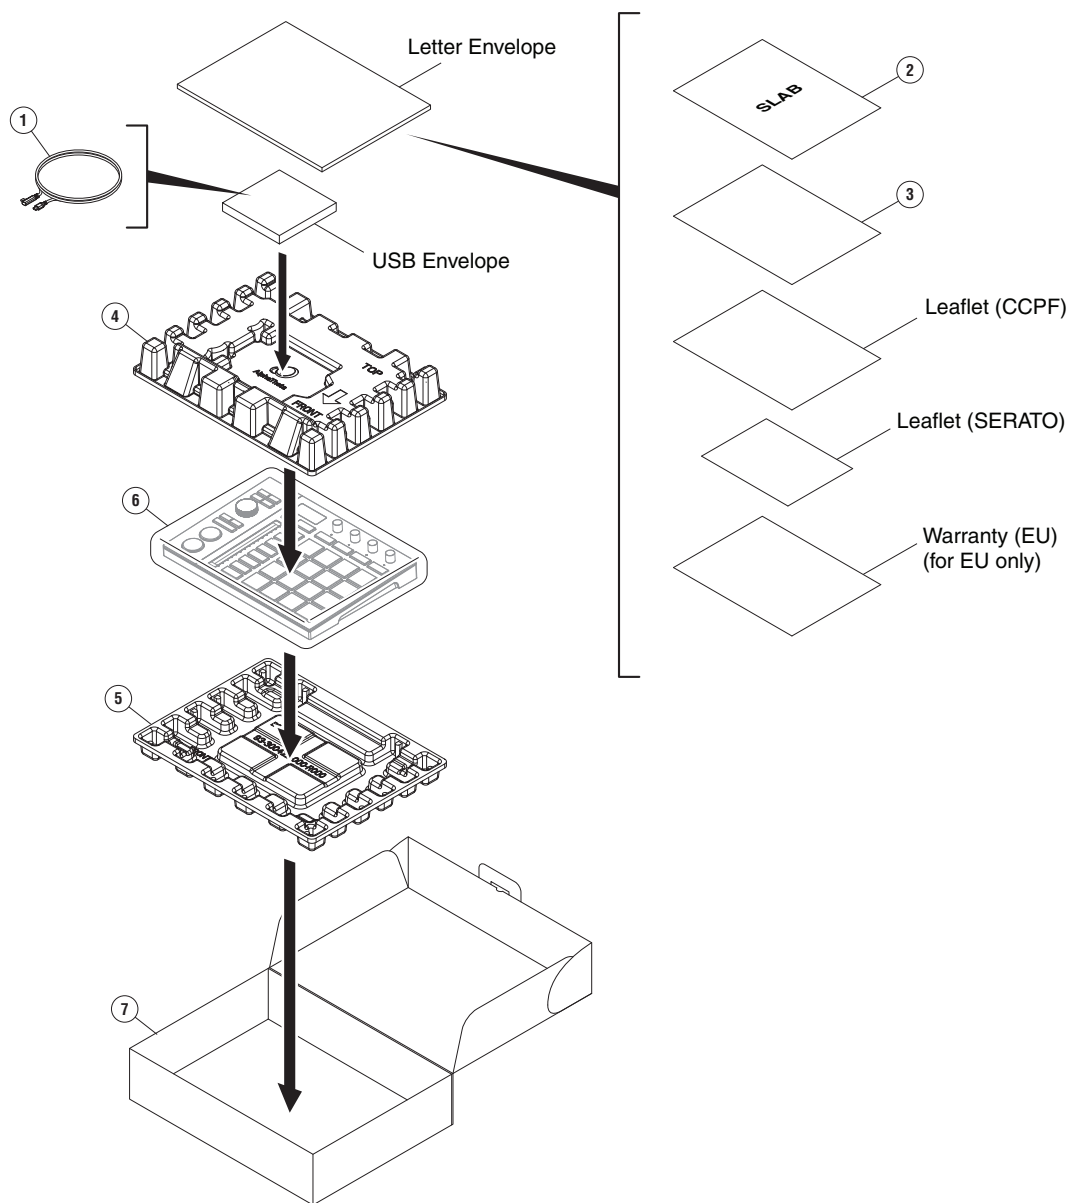

(1) PACKING SECTION PARTS LIST

Mark No.	Description	Part No.
A	1 USB cable	46-008574-002-R000
	2 Quick Start Guide	See Contrast table (2)
	3 Sub Manual	See Contrast table (2)
	4 Pulp Molded Pad (A)	93-300421-001-R000
	5 Pulp Molded Pad (B)	93-300422-001-R000
■	6 Mirror Mat	93-200769-000-R000
	7 Giftbox	See Contrast table (2)

(2) CONTRAST TABLE

SLAB/WXJ and AXJ are constructed the same except for the following:


Mark	No.	Symbol and Description	SLAB/WXJ	SLAB/AXJ
■	2	Quick Start Guide	91-003069-020-R000	91-003067-020-R000
	3	Sub Manual	91-003070-010-R000	91-003068-020-R000
	7	Giftbox	90-002857-030-R000	90-002856-020-R000

C


D

E

F

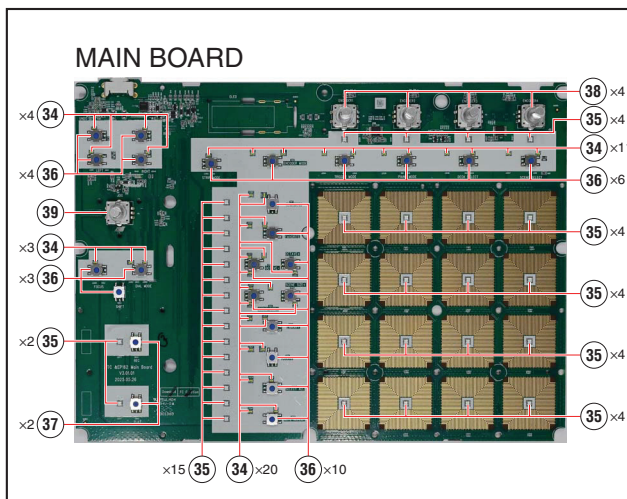

- Bottom view

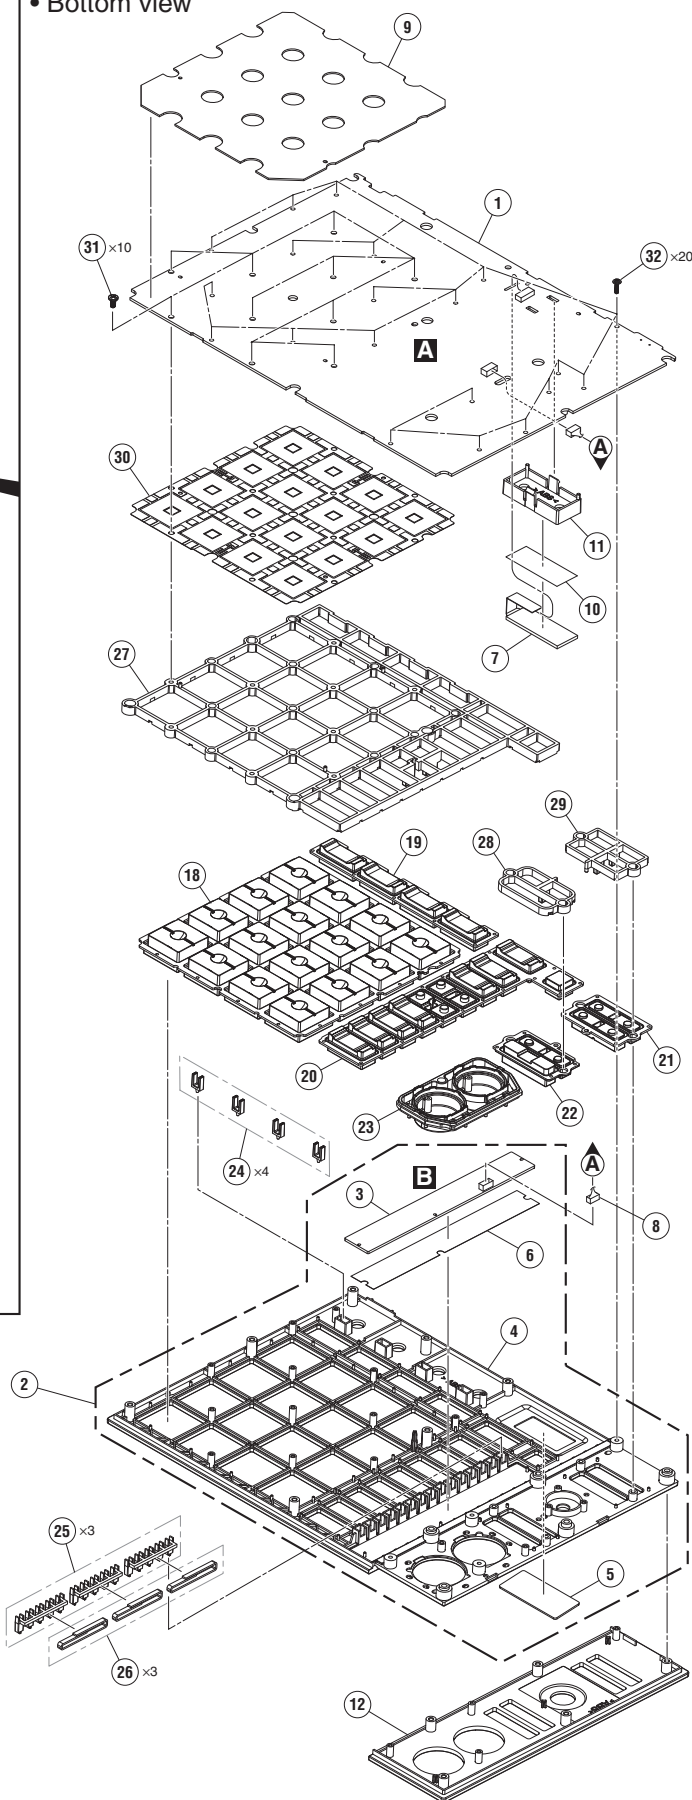

(1) EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
A	1 MAIN BOARD	50-012503-010-R000	21	Undo Redo LR Button	39-001807-003-R000
	2 1..SLAB Panel Service Assy	DEA1206	22	Focus Mode Shift Button	39-001806-003-R000
	3 2..TOUCH BOARD	50-012503-010-R010	23	Play / Rec Button	30-009310-002-R000
	NSP 4 2..Control Panel	30-009222-002-R000	24	Small Knob Indicator Lens	30-009327-000-R000
	5 2..Window OLED	30-009328-001-R000	25	Touch Strip Indicator Lens	30-009325-000-R000
	6 2..Touch PCB DS Tape	16-001569-000-R000	26	EVA for Lens	16-001608-000-R000
	7 Display	43-104062-000-R000	27	Shading Part 1	30-009330-002-R000
	8 Cable	46-504479-000-R000	28	Shading Part 2	30-009332-002-R000
	9 EVA Sheet for Pad	32-001604-001-R000	29	Shading Part 3	30-009331-002-R000
	10 LCD DS Tape	16-001568-001-R000	30	FSR Sheet	32-001603-003-R000
B	11 LCD Bracket	30-009329-002-R000	31	Screw 3x6	10-100872-000-R000
	12 Sub Panel	30-009223-002-R000	32	Screw 2x8	10-026903-000-R000
	13 Chassis	See Contrast table (2)	33	Screw 3x12	10-100721-000-R000
	14 Metal_Backing_Plate	31-006980-000-R000	34	White LED (LED6, 12, 18-20, 37-42, 47-56, 59-70, 72, 74, 75)	43-104061-000-R002
	15 Foot	39-001784-001-R000	35	RGB LED (LED1-5, 14-17, 21, 71, 73, 7-12, 22-36, 43-46)	43-101585-000-R000
	16 Small Knob	30-009326-002-R000	36	Tact Switch (SW1-6, 17-25)	42-000132-000-R001
	17 Big Knob	30-009311-002-R000	37	Tact Switch (ALPS) (SW24, 25)	42-000132-000-R000
	18 Pad 1-16	39-001809-002-R000	38	Encoder With SW (P1-4)	42-002193-002-R000
	19 Pad Mode 1-4 Button	39-001810-003-R000	39	Encoder With SW (Dial)(P5)	42-002192-001-R000
	C 20 Pad Menu Button	39-001808-003-R000			

(2) CONTRAST TABLE

SLAB/WXJ and AXJ are constructed the same except for the following:

Mark	No.	Symbol and Description	SLAB/WXJ	SLAB/AXJ
	13	Chassis	30-009309-002-R000	30-009309-012-R000